



1. Cement inner and sub-floors together, using roof as a guide for correct length and alignment.

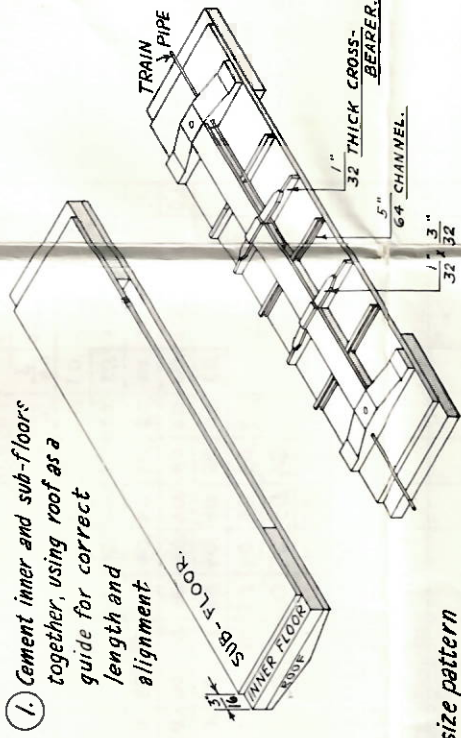



Full size pattern of crossbearer, $\frac{1}{32}$ " thick. #65 drill for train pipe.

2. Assemble complete underframe. Drill center sill and crossbearers for train pipe before assembly.
3. Install flooring.
4. Assemble completed floor unit, ends and roof.
5. Add outer roof and roof details.

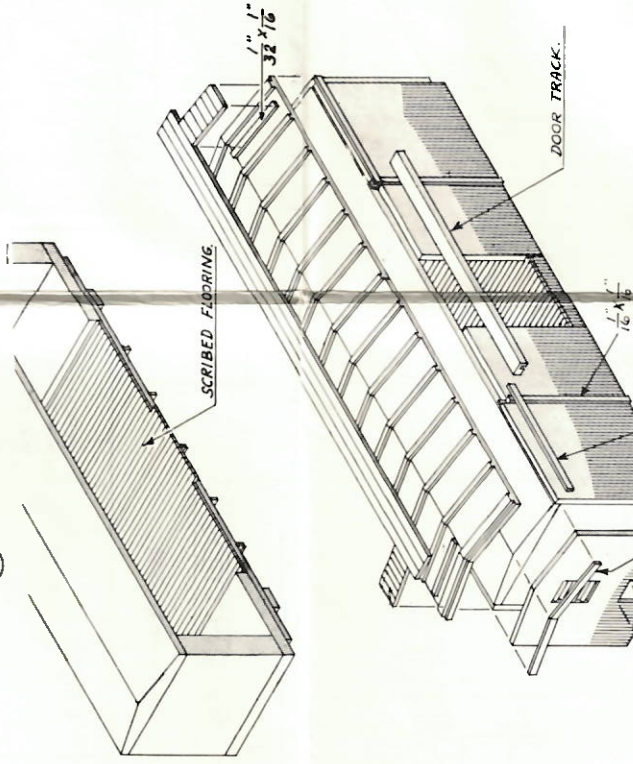

6. Apply side and end sheathing.
7. Add fascia, door slides and end ventilators.

8. Assemble doors. Cement fine wire in grooves on rear of screen doors.
9. Mount air brake system parts on small blocks. Complete and authentic brake rigging is shown for the builder who wants a super-detailed model.
10. Install end sills, couplers, grab-irons etc. End sills are designed to accommodate any standard auto couplers.
11. Paint entire car box-car red. Paint doors separately and install when dry, using spikes as lower guides.

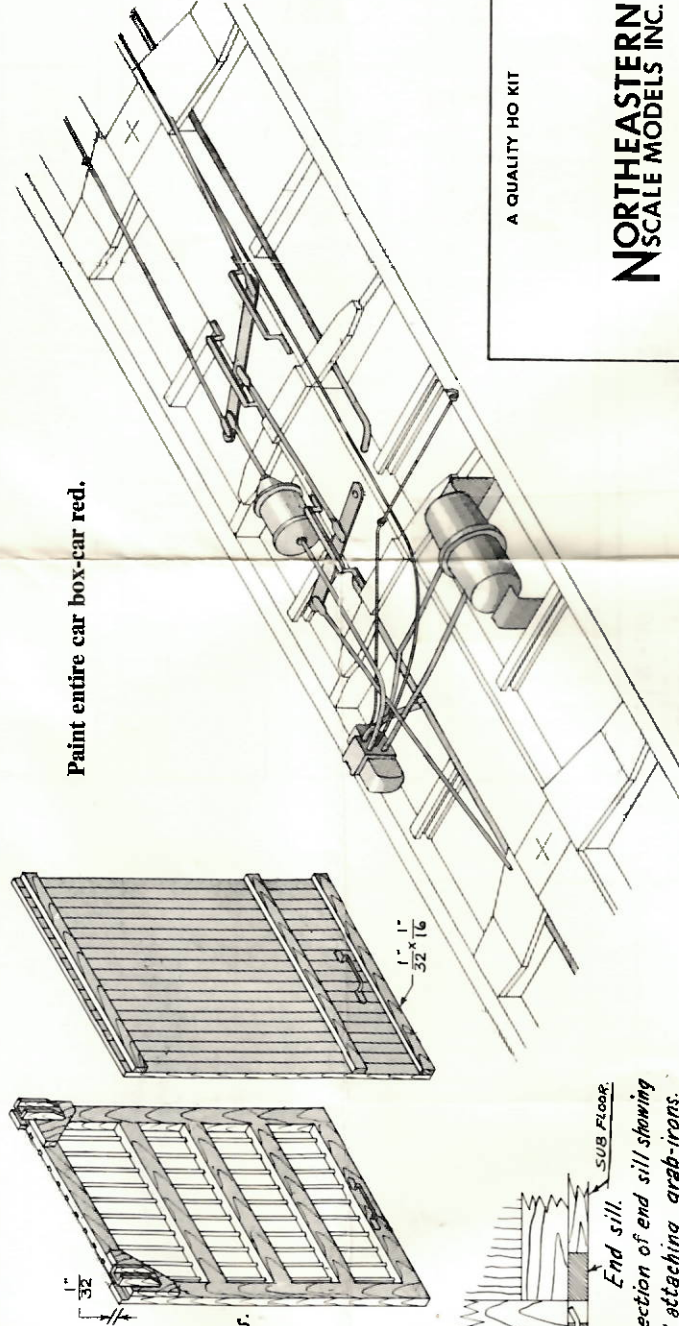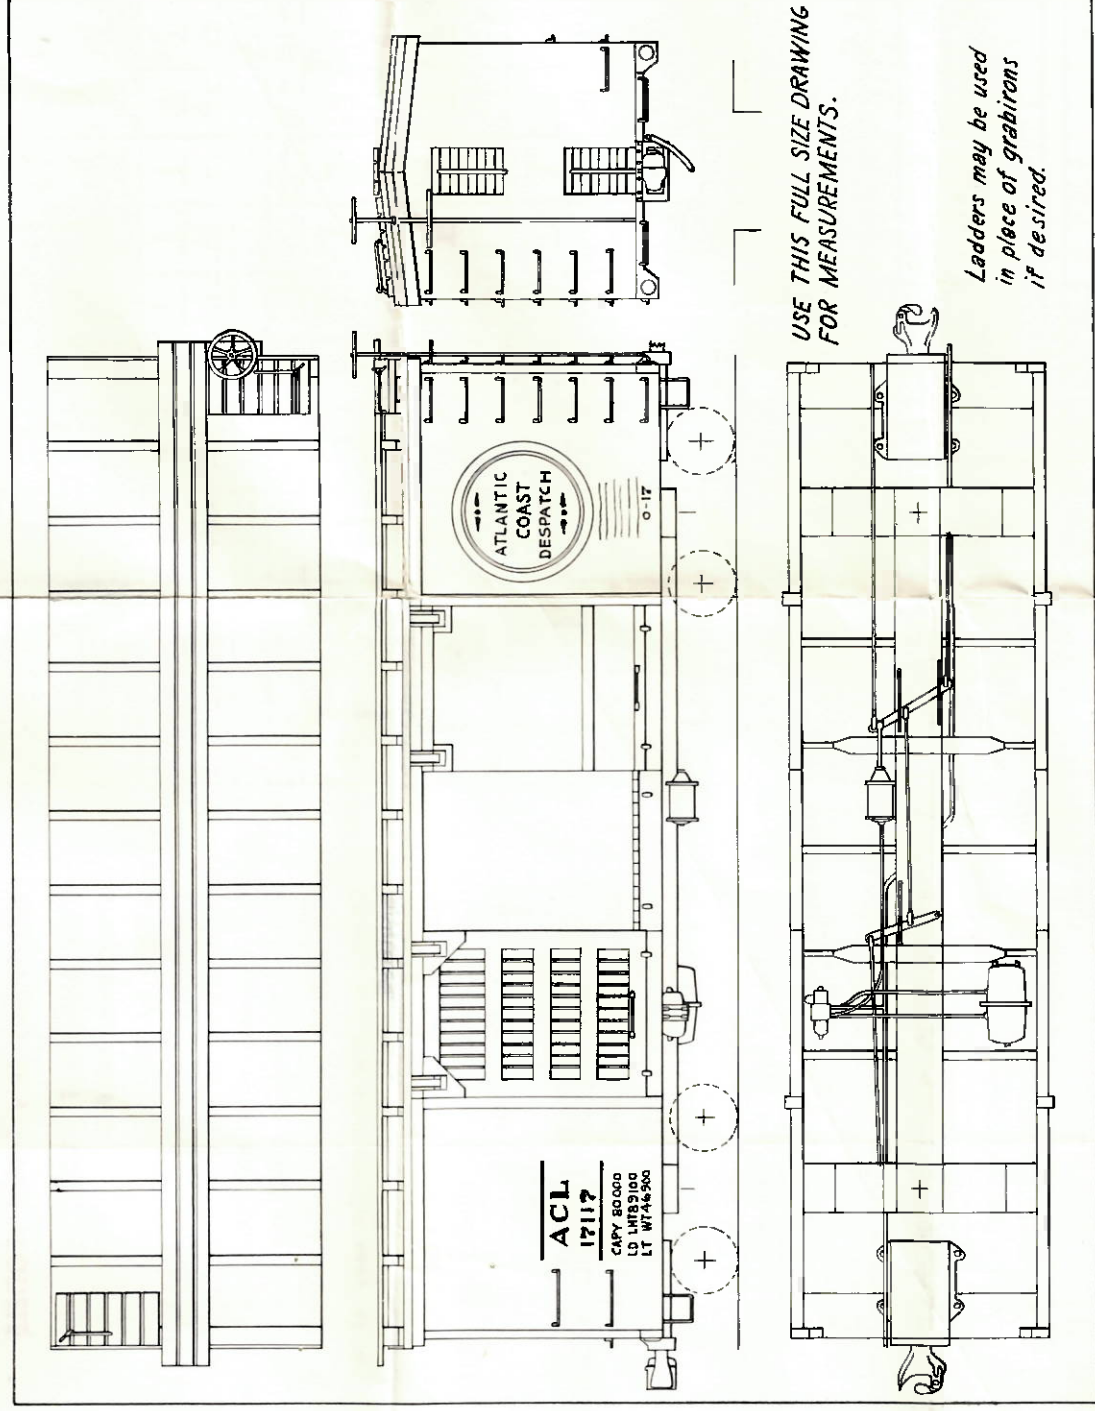

Cross section of end sill showing method attaching grab-irons.

A QUALITY HO KIT

NORTHEASTERN
SCALE MODELS INC.

BOX 425 METHUEN, MASS. 01844