
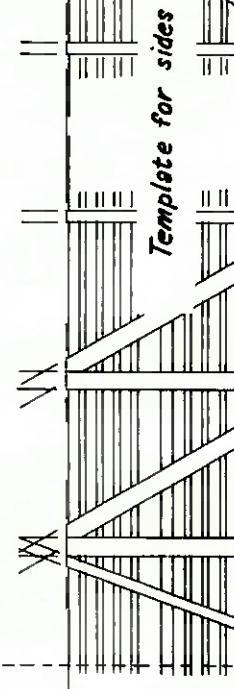


② Cement bracing to ends.

⑤ Attach sides, second deck and door slides. See enlarged detail drawing for door installation. Upper door slide is a grooved piece, lower guide is 1/32 wire.

1/16 sq. upper deck support

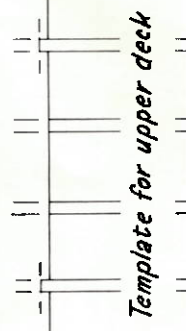




A.A.R. CONVERTIBLE STOCK CAR
 HO GAUGE 3.5mm. 1 FT.
 DESIGNED AND MADE BY
 NORTHEASTERN SCALE MODELS

⑦ Paint entire car. Stock cars are usually whitewashed inside with the whitewash running down the outside. A visit to the freight yard will suggest many ways to realistically "mess up" your stock cars.

⑧ Attach letter boards and trucks. Couplers are not included because of the wide variety in use.


⑥ Attach roof walk, ladders, brake system etc. Complete brake rigging and piping are shown for the super-detailer. Use 1/32 wire for the rods and piping, sheet brass for levers.

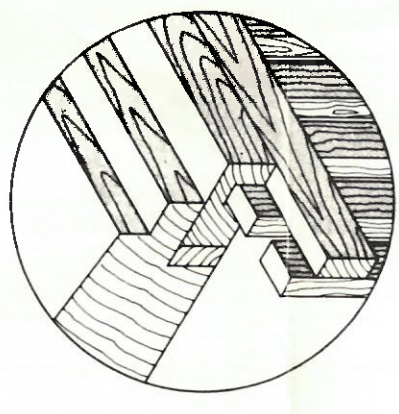

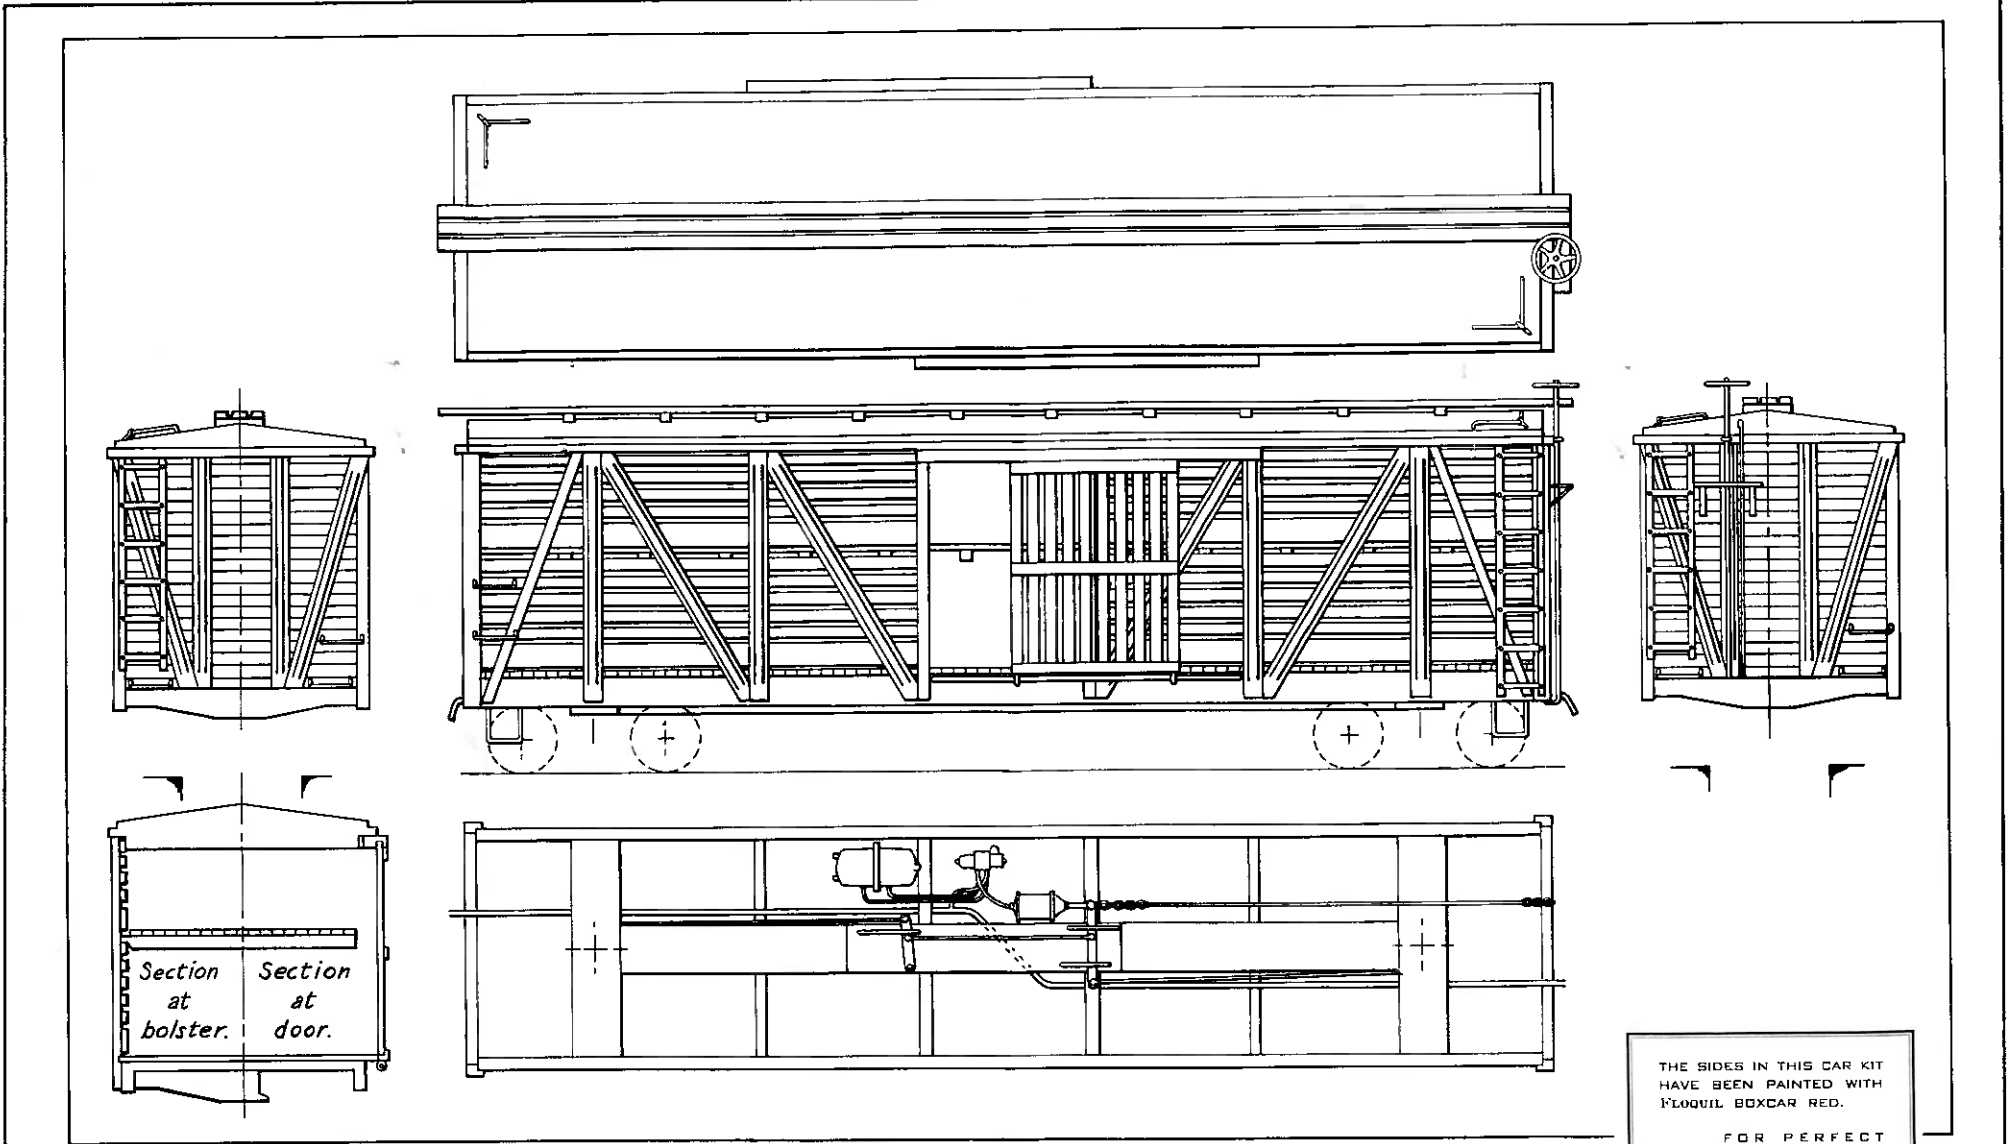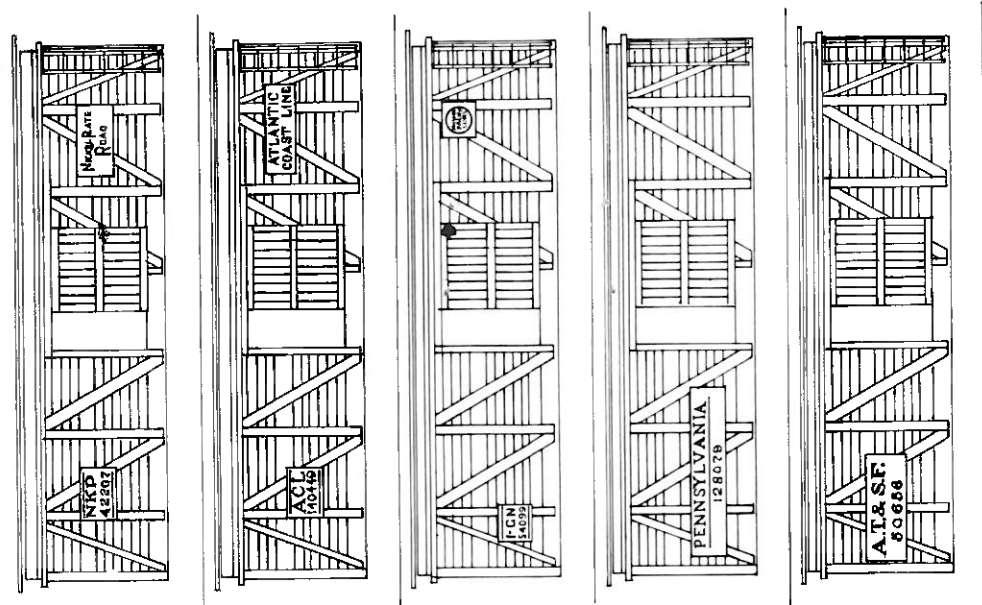


THE SIDES IN THIS CAR KIT HAVE BEEN PAINTED WITH FLOQUIL BOXCAR RED.

FOR PERFECT MATCH, USE FLOQUIL BOXCAR RED MODEL RAILROAD COLOR.

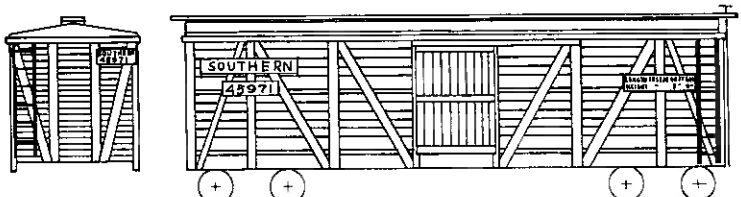

Trucks and underframe, black; body, roof and ends boxcar red.

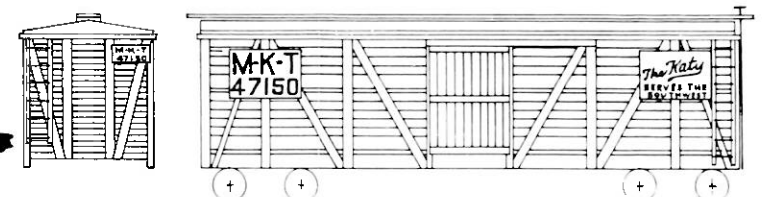

Trucks and underframe, black; body, roof and ends, boxcar red.